



Spare- & wear part list

All prices in Euro excluding tax, packaging and delivery

(Subject to alteration of prices)

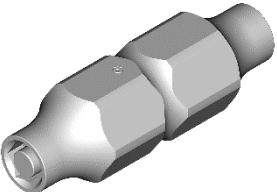 
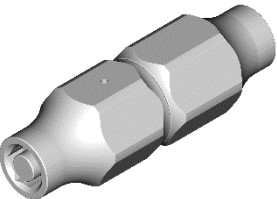 
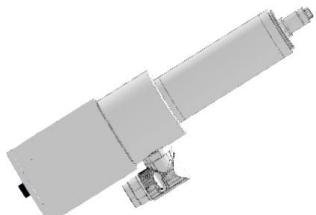 
Legend

	Low	Medium	High		Low	Medium	High		Spare part	Wear part
<i>POD</i> (Probability of Default)				<i>LT</i> (Lead Time)	 ~1 Week	 ~2 Weeks	 >2 Weeks	<i>TOP</i> Type of part	<i>SP</i>	<i>WP</i>

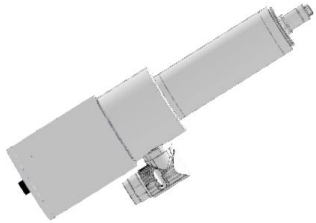 
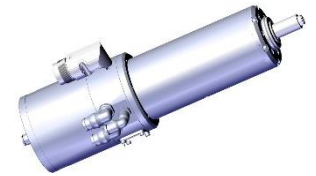 
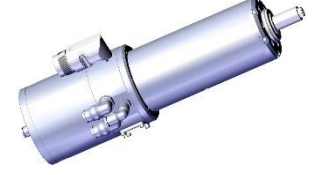 
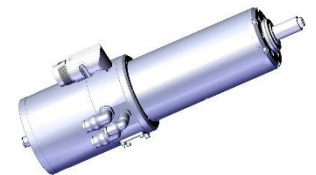 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	616503 0280	Timing belt grey (X/Y/Z-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				WP	
	616502 028001	Timing belt red (X/Y/Z-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				WP	
	439049 0061	Collet for 6 mm Shaft	350i 350i PRO 350i Loader 350i Loader PRO				WP	

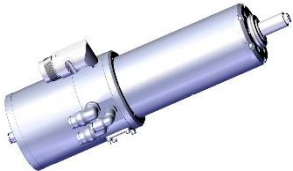 
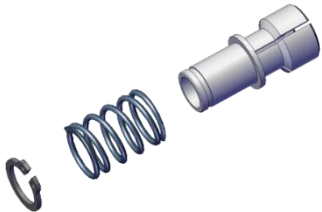 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	439093 1006	Collet for 6 mm Shaft	350i PRO + 350i Loader PRO +				WP	
	439049 9000	Torque spanner collet J	350i 350i Loader 350i PRO 350i PRO +				SP	
	439093 9000	Torque spanner collet s	350i Loader PRO 350i Loader PRO +				SP	
	439053 0300	Milling spindle	350i 350i PRO 350i Loader 350i Loader PRO				WP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	439053 0200R	Milling spindle Refurbished	350i 350i PRO 350i Loader 350i Loader PRO				WP	
	E439083	Milling spindle	350i PRO + 350i Loader PRO +	Until 10/2022			WP	
	E439083R	Milling spindle Refurbished	350i PRO + 350i Loader PRO +	Until 10/2022			WP	
	439093	Milling spindle Refurbished	350i PRO + 350i Loader PRO +	from 10/2022			WP	

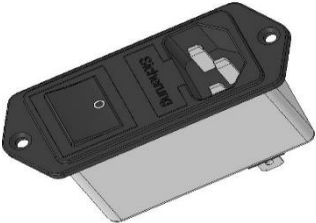 
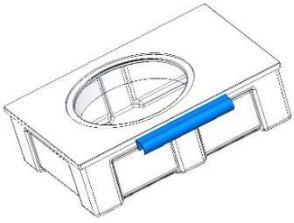 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	439093R	Milling spindle Refurbished	350i PRO + 350i Loader PRO +	from 10/2022			WP	
	439049 0024	Tool holder 6 mm shaft	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				WP	
	201005 0357	Sealing ring for spray ring	350i PRO + 350i Loader PRO +	Two sealing rings are installed inside the spraying ring of the machine			SP	
	439049 0008	Milling spindle maintenance kit	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				WP	

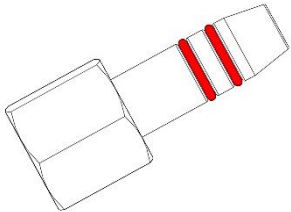 
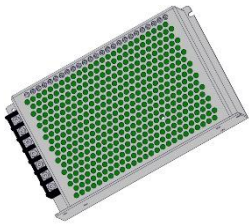 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	499032	Grease	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				WP	
	639102 3263	Clamp Loader	350i Loader 350i Loader PRO 350i Loader PRO +				WP	
	526020 2000	Screw set	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				WP	
	682000 0012	Suction hose	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				WP	

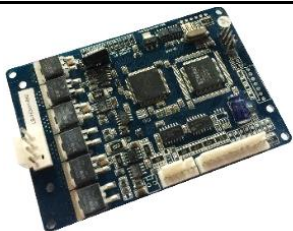 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	566118	Main switch module	350i 350i PRO 350i Loader 350i Loader PRO				SP	
	201003 0674	Main switch module	350i PRO + 350i Loader PRO +				SP	
	682020 0002	Mains input filter	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	690000 0597	Coolant tank	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

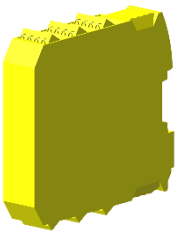 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	201005 1006	O rings connection coolant tank	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	599012 5048	48 V power supply	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	599012 1024	24 V power supply 100 VAC	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E474510 1810	Motherboard	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	Until 5/2022			SP	

 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	474511 1810	Motherboard mBUS 10	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 6/2022			SP	
	E474510 1060	Amplifier axis (G2)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E474511 1065	Amplifier axis (G3)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E474510 1700	IO / safety circuit module	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	Until 5/2022			SP	

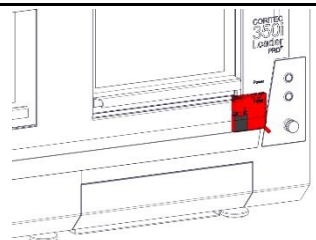 
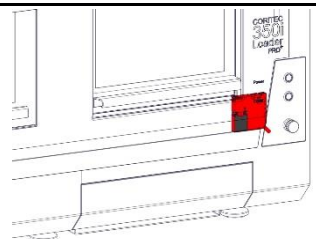 
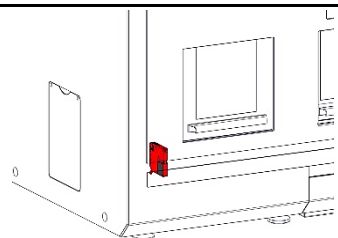 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	563312 0348	safety circuit module	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 6/2022			SP	
	201003 0827	Micro contactor	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 6/2022			SP	
	474510 1510	Servo controller Milling spindle	350i 350i PRO 350i Loader 350i Loader PRO	until 04/2022			SP	
	201003 0813	Servo controller Milling spindle	350i 350i PRO 350i Loader 350i Loader PRO	from 04/2022			SP	

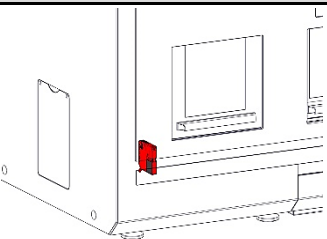 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	201003 0820	Servo controller Milling spindle	350i PRO + 350i Loader PRO +				SP	
	474511 1022	Spindle and safety IO board	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	from 6/2022			SP	
	474511 1032	IO board	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	from 6/2022			SP	
	201003 0071	Coupling relay	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	2 pole 24 VDC / 8 A			SP	

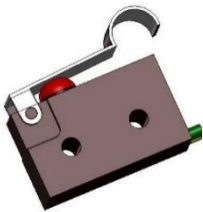 
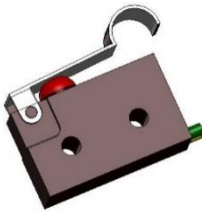 
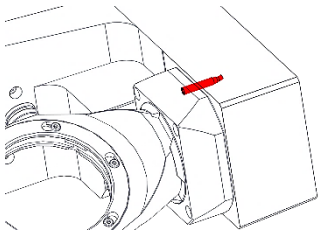 
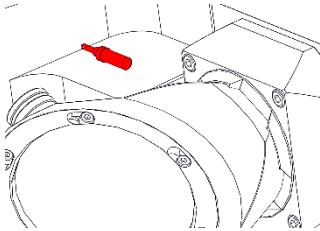 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	201003 0695	Coupling relay	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	1 pole 250 VAC / 6 A / 24 VDC			SP	
	E562047 0004	Door safety switch Processing area	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	Until 05/2022			SP	
	E201003 0956	Door safety switch Processing area	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 5/2022			SP	
	E562047 0002	Door safety switch Loader	350i Loader 350i Loader PRO 350i Loader PRO +	Until 05/2022			SP	

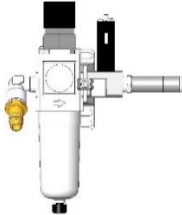 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	E201003 09561	Door safety switch Loader	350i Loader 350i Loader PRO 350i Loader PRO +	From 5/2022			SP	
	562047 1000	Actuator Door safety switch	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	682011 0020	Diaphragm pump	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E397022 10120	Limit switch X-axis	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	E397022 10121	Limit switch Y-axis	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E397022 10122	Limit switch Z-axis	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E563005	Reference sensor A axis	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E563005 0001	Reference sensor B axis	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	470162	Screen	350i 350i Loader				SP	
	470167	Screen	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +				SP	
	E470071 1380RM	Computer	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	201002 0055	Compressed air terminal	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	577175 1001	Motor cable (X-axis)	350i 350i Loader 350i PRO 350i Loader PRO	From 5/2015 until 7/2018			SP	
	577175 1002	Motor cable (Y/Z-axis)	350i 350i Loader 350i PRO 350i Loader PRO	From 5/2015 until 7/2018			SP	
	577175 1004	Motor cable (A-axis)	350i 350i Loader 350i PRO 350i Loader PRO	From 5/2015 Until 7/2018			SP	
	577175 1005	Motor cable (B-axis)	350i 350i Loader 350i PRO 350i Loader PRO	From 5/2015 Until 7/2018			SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	577176 1001	Encoder cable (X-axis)	350i 350i Loader	From 5/2015 Until 7/2018			SP	
	577176 1002	Encoder cable (Y/Z-axis)	350i 350i Loader	From 5/2015 Until 7/2018			SP	
	577176 1004	Encoder cable (A-axis)	350i 350i Loader	From 5/2015 Until 7/2018			SP	
	577176 1005	Encoder cable (B-axis)	350i 350i Loader	From 5/2015 Until 7/2018			SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639104 0001	Motor cable (X/Z/B-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 7/2018 350i (Z/B-axis) 350i PRO (Z/B-axis) 350i PRO (Z/B-axis) 350i Loader (X/B-axis) 350i Loader PRO (X/B-axis) 350i Loader PRO + (X/B-axis)			SP	
	639104 0002	Motor cable (Y-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 7/2018			SP	
	639104 0003	Motor cable (X/Z-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 7/2018 350i (X-axis) 350i PRO (X-axis) 350i PRO + (X-axis) 350i Loader (Z-axis) 350i Loader PRO (Z-axis) 350i Loader PRO + (Z-axis)			SP	
	639104 0005	Motor cable (A-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 7/2018			SP	

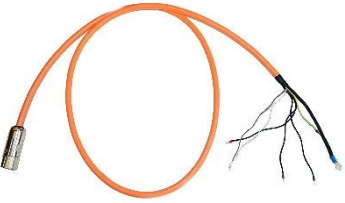 
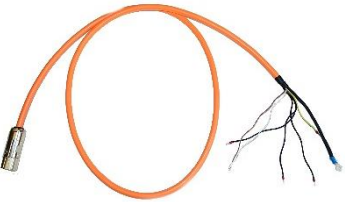 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639104 0007	Encoder cable (X/Z/B-axis)	350i 350i Loader	From 7/2018 350i 350i Loader (Z/B-axis) (X/B-axis)			SP	
	E639104 00191	Encoder cable (A/B-axis)	350i 350i PRO 350i Loader 350i Loader PRO	Until 7/2018			SP	
	639104 0008	Encoder cable (X/Z/B-axis)	350i 350i Loader	From 7/2018 350i 350i Loader (X/Y-axis) (Z-axis)			SP	
	639104 0009	Encoder cable (X/Z/B-axis)	350i Loader	From 7/2018 350i Loader (Y-axis)			SP	

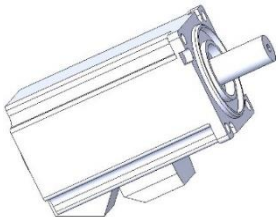 
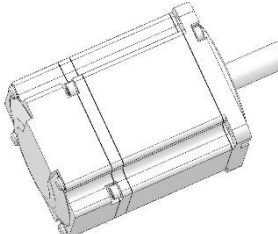 
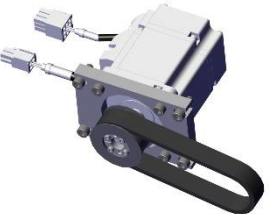 
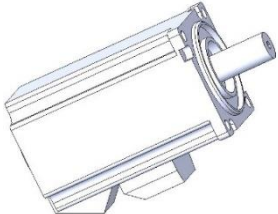 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639104 0014	Encoder cable (X/Z/B-axis)	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +	From 7/2018 350i PRO (Z/B-axis) 350i PRO + (Z/B-axis) 350i Loader PRO (X/B-axis) 350i Loader PRO + (X/B-axis)			SP	
	639104 0015	Encoder cable (X/Z-axis)	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +	From 7/2018 350i PRO (X-axis) 350i PRO + (X-axis) 350i Loader PRO + (Z-axis) 350i Loader PRO + (Z-axis)			SP	
	639104 0016	Encoder cable (Y-axis)	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +	From 7/2018			SP	
	639104 0019	Encoder cable (A-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 7/2018			SP	

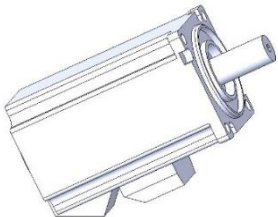 
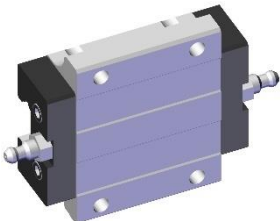 
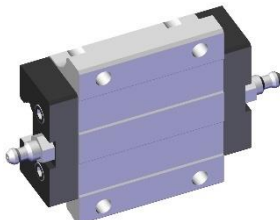 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	577182 0004	Milling spindle cable	350i 350i PRO 350i Loader 350i Loader PRO	Until 7/2018			SP	
	639104 0022	Milling spindle cable	350i 350i PRO 350i Loader 350i Loader PRO	From 7/2018 Until 4/2022			SP	
	E201001 0155	Milling spindle cable	350i PRO + 350i Loader PRO +	Until 4/2022			SP	
	639104 0090	Milling spindle cable	350i PRO + 350i Loader PRO +	From 4/2022			SP	

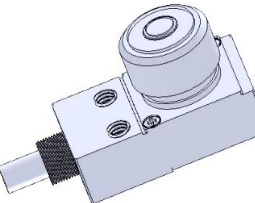 
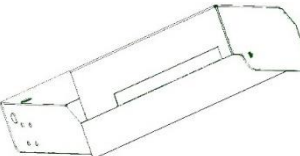 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	475452 0065	Motor (X/Y/Z/B-axis)	350i 350i Loader				SP	
	475452 0075	Motor (A-axis)	350i 350i Loader	From 1/2017 Until 7/2018			SP	
	E475452 0075	Conversion Kit A-Motor	350i 350i Loader	Until 12/2016			SP	
	474510 0205	Motor (X/Y/Z/B-axis)	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +				SP	

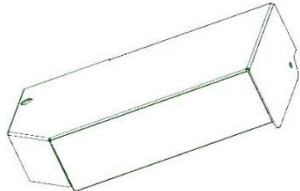 
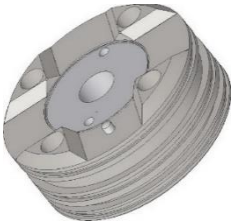 
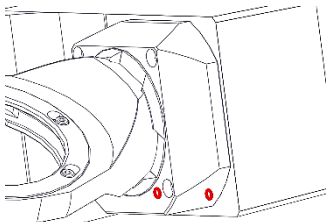 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	474510 0205	Motor (A-axis)	350i 350i Loader	From 7/2018			SP	
	E470821	Motor Loader wheel	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	423069	Guide carriage (X-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	423068	Guide carriage (Y/Z-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

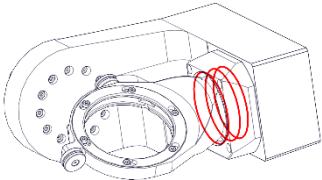 
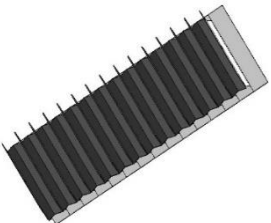 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	680100 0062	Temperature sensor	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	Until 05/2022			SP	
	680100 0300	Temperature sensor	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	From 05/2022			SP	
	562054 1030	Tool probe	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E639100 809005	Tool flap	350i 350i PRO 350i PRO +				SP	

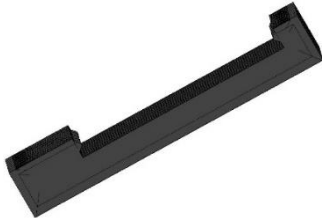 
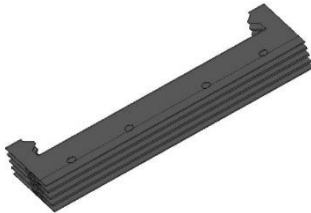 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	E639100 6968	Tool flap	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	639100 6970	Mounting plate Tool flap	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	690000 0169	Zero-point clamping system	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	201005 1830	Zero-point clamping system O-ring	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	l= 3,00 d=1,8			SP	

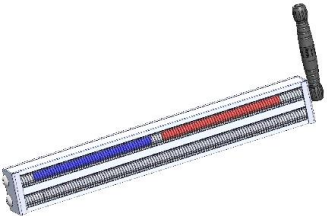 
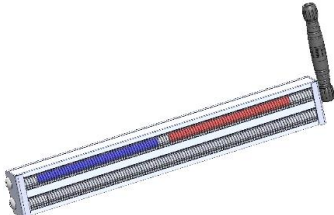 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	201005 0075	Zero-point clamping system O-ring	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	l= 75,92 d=1,78			SP	
	639100 6891	Bellow both sides (X-axis)	350i 350i PRO 350i PRO +				SP	
	639100 9686	Bellow left (X-axis)	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	639102 472705	Sheet metal bellows bottom X-axis	350i Loader 350i Loader PRO 350i Loader PRO +				SP	

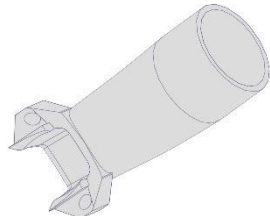 
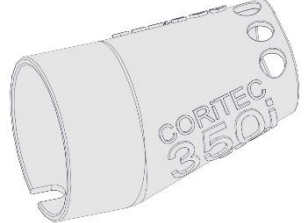 
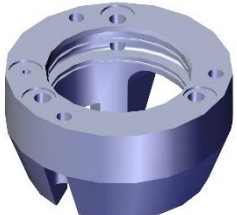 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639102 472805	Sheet metal bellows top X-axis	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	639100 9682	Bellow (Y-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	639100 9683	Bellow (Z-axis)	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	521020 6250	Filter fleece	350i 350i PRO 350i PRO +				SP	

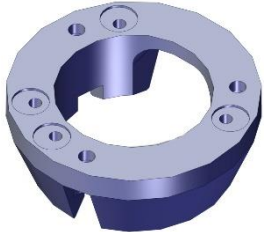 
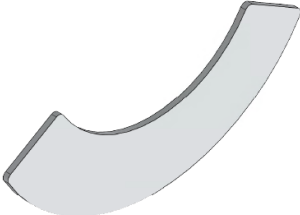 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	521020 6360	Filter fleece	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	639100 9703	Filter mat	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	577186 0001	LED-Strip-inside milling cabine	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	577185 0005	LED-Strip-RGB Loader	350i Loader 350i Loader PRO 350i Loader PRO +				SP	

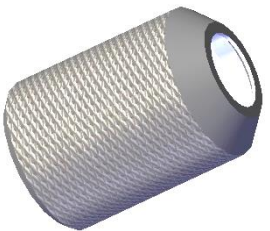 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639100 8166	Suction Socket	350i 350i PRO 350i Loader 350i Loader PRO	Until 6/2017			SP	
	639102 2294	Suction Socket	350i 350i PRO 350i Loader 350i Loader PRO	From 6/2017			SP	
	639102 3337	Suction Socket	350i PRO + 350i Loader PRO +				SP	
	639 102 3310	Cooling Head	350i 350i PRO 350i Loader 350i Loader PRO	From 1/2020			SP	

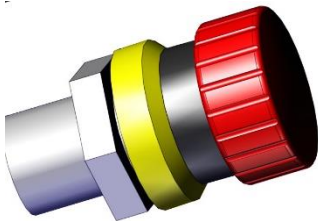 
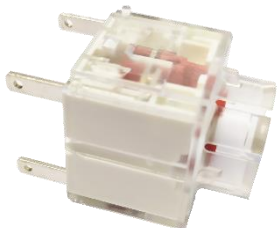 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639102 2228	Cooling Head	350i 350i PRO 350i Loader 350i Loader PRO	Until 12/2019			SP	
	639102 6907	Spacer plate for optimizing the jet of the cooling lubricant nozzles	350i 350i PRO 350i Loader 350i Loader PRO				SP	
	682023 0143	Brass nozzle	350i 350i Loader	Until 07/2018			SP	
	639102 3294	Cone tube (spindle head)	350i PRO + 350i Loader PRO +				SP	

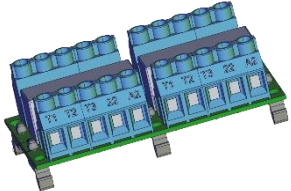 
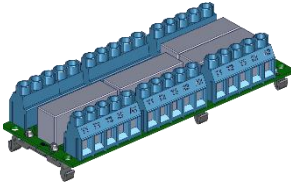 
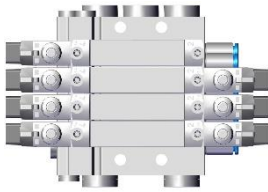 
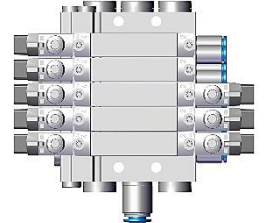 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639102 3295	Union nut Coolant nozzle	350i PRO + 350i Loader PRO +				SP	
	639102 3296	coolant nozzle	350i PRO + 350i Loader PRO +				SP	
	474510 1050	Micro stepping Drive Loader Motor	350i Loader 350i Loader PRO 350i Loader PRO +	Until 5/2022			SP	
	474512 0542	Micro stepping Drive Loader Motor	350i Loader 350i Loader PRO 350i Loader PRO +	From 6/2022			SP	

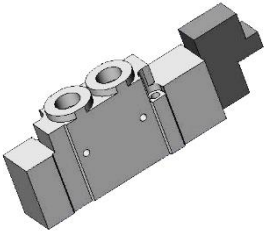 
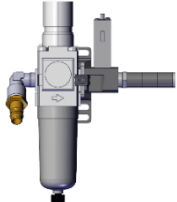 
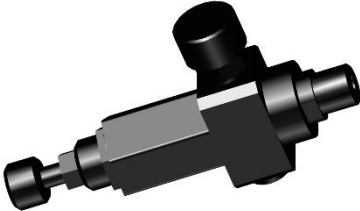 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	474510 1051	I/O Modul	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	474511 1010	Single Axis Step Note for Loader	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	562051 0030	EMERGENCY STOP button	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	562051 0031	EMERGENCY Stop Switching element	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

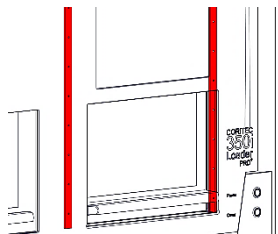 
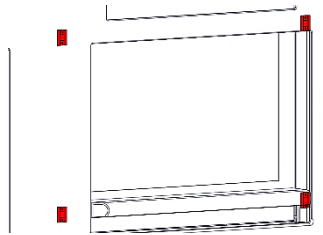 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	E639104 6002	Load relay board	350i 350i PRO 350i PRO +				SP	
	E639104 6003	Load relay board	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	201002 0257	Four Valve Terminal	350i 350i PRO 350i PRO +				SP	
	201002 0258	Five Valve Terminal	350i Loader 350i Loader PRO 350i Loader PRO +				SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	201002 0025	Pneumatic valve 5/2	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	201002 0055	Compressed air terminal with pressure sensor	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	201002 0001	Pressure control valve	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E639100 692700	Front door machine interior	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

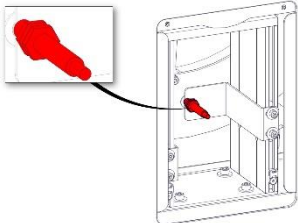 
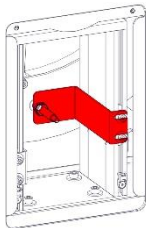 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	682023 0480	Slide rail with 2x sliding block front door machine interior	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	682023 1000	2x sliding block front door machine interior	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	420106	Adapter LS 802 / RS 232	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	201013 1002	AMP 2 pole socket housing	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

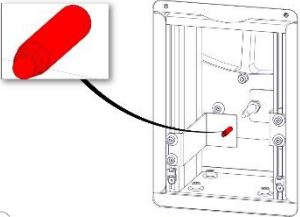 
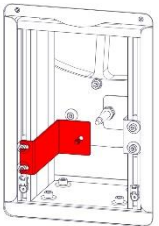 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	201013 1102	AMP 2 pole connector housing	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	470071 3022	Adapter USB / RS 232	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	474510 1023	Adapter USB LDCN LS 832 C06	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	526020 0260	Ejector	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	

 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	201003 0130	Micro fuse	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	10 A 5x20 mm T			SP	
	201003 1041	Resistance	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +	220 Ω 3 W			SP	
	E682023 00240	Sensor Positioning	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	639102 1401	Mounting Sensor Positioning	350i Loader 350i Loader PRO 350i Loader PRO +				SP	

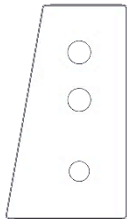 
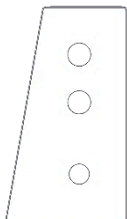 
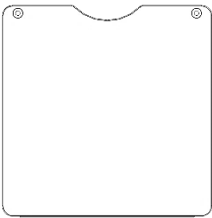 
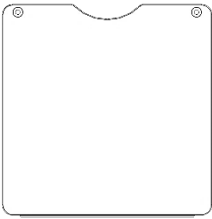 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	E563005 0002	Sensor Referencing	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	639100 8152	Mounting Sensor Referencing	350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	E201001 0152	Connection cable Tool changer	350i 350i PRO 350i PRO + 350i Loader 350i Loader PRO 350i Loader PRO +				SP	
	690000 0670	Battery block	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +				SP	

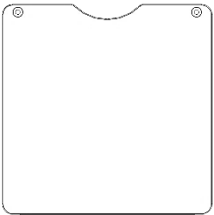 
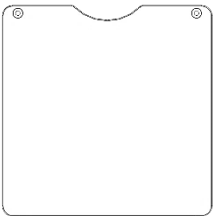 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	E201003 37001	Battery block rechargeable	350i PRO 350i Loader PRO				SP	
	E201003 37002	Battery block rechargeable	350i PRO + 350i Loader PRO +				SP	
	E439047 2051	Flow sensor	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +	Until 04/2023			SP	
	E439047 2055	Flow sensor	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +	From 05/2023			SP	

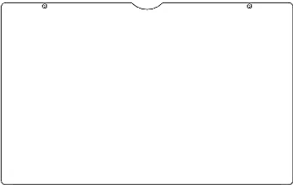 
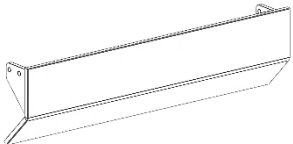 
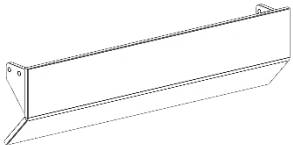 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639102 7191	Button panel	350i 350i Loader				SP	
	639102 7198	Button panel	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +				SP	
	639102 7192	Maintenance flap right	350i				SP	
	639102 7195	Maintenance flap right	350i Loader				SP	

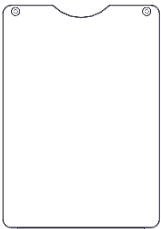 
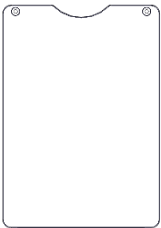 
Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639102 7199	Maintenance flap right	350i PRO 350i PRO +				SP	
	639102 7602	Maintenance flap right	350i Loader PRO 350i Loader PRO +				SP	
	639102 7193	Maintenance flap top	350i				SP	
	639102 7196	Maintenance flap top	350i Loader				SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639102 7200	Maintenance flap top	350i PRO 350i PRO +				SP	
	639102 7603	Maintenance flap top	350i Loader PRO 350i Loader PRO +				SP	
	639102 7194	Flap coolant tank	350i 350i Loader				SP	
	639102 7601	Flap coolant tank	350i PRO 350i PRO + 350i Loader PRO 350i Loader PRO +				SP	

Spare and Wear parts

Picture	Item no.	Name	Machine	Part Info	POD	LT	TOP	Price (€)
	639102 7197	Maintenance flap left	350i Loader				SP	
	639102 7604	Maintenance flap left	350i Loader PRO 350i Loader PRO +				SP	

imes-icore® GmbH

Tel. +49 (0) 66 72/898 228

Fax +49 (0) 66 72/898 222

www.imes-icore.com